



go anywhere communication and data transfer

QUICKSTART GUIDE



www.intercel.com.au



INTRODUCTION

This quick start guide is intended to get you up and running with the eSAM Modem, and to familiarize yourself with its basic functions and capabilities.

To follow this guide, you will need an active SIM Card from a mobile provider of your choice and a computer with an available Ethernet port or USB to Ethernet Converter.

For a more complete guide to this modem, please see the full User Guide available on our website or contact us at intercel@intercel.com.au.



HARDWARE OVERVIEW



NUMBER	ITEM	Description
1	DIV Antenna Connector	Connection for Diversity (Secondary) 4G LTE Antenna
2	Reset Button	Reset Button. Press to reset the modem, hold to reset modem to factory settings
3	GPS Antenna Connector	Connection for GPS Antenna
4	SIM Card Tray	Ejectable SIM Card Tray
5	Sim Card Eject Button	Press to eject the SIM Card Tray
6	MAIN Antenna Connector	Connection for Primary 4G LTE Antenna





NUMBER	ITEM	Description
1	TX Port	RS232 or RS485 Transmit Port ¹
2	RX Port	RS232 or RS485 Receive Port ¹
3	GND	Ground, used with RS232 or RS485 Connection ¹
4	GPI	GPIO Port, used as a digital input
5	GPO	GPIO Port, used as a digital output
6	LAN Port	Used to connect client devices to the eSAM Router
7	Power Connector	Micro-fit connector used to supply power to the eSAM – wide 9- 30V input voltage range.
		RS485 mode only supported on specific Models



HARDWARE INSTALLATION

1. Install the 4G Antenna

The Ultra eSAM comes supplied with two 4G LTE Antenna. Mount these antenna to the rear of the eSAM, to the connectors labelled *'MAIN'* and *'DIV'*

2. Insert the SIM Card

a. Remove the SIM Carrier tray from the eSAM by pressing the small 'eject' button located to the right of the SIM Tray



- b. Insert your SIM Card into the tray, with the gold contacts facing upwards and the cutout in the SIM Card matching the cutout in the carrier tray
- c. Re-insert the SIM Tray into the eSAM.

3. Connect the Power Cable

Plug the supplied 12V Power Adapter into the wall and connect the micro-fit connector on the other side of the power lead into your eSAM.



4. Connect the eSAM to your computer using an Ethernet Cable

- a. Connect an Ethernet cable between the LAN port of your eSAM and the LAN Port of your computer
- b. Enable DHCP on your computer, if not enabled by default (typically not required)



SOFTWARE CONFIGURATION

- 1. Open the web interface in your web browser
 - a. Open your preferred web browser
 - b. Enter '192.168.8.1' into the address bar
 - c. Press Enter
- 2. Log into the web interface with the default username and login

Username: admin Password: admin

modem

3. Configure your SIM Card Settings (optional)

- a. From the right-most menu, open the 'Network > Modem' Window
- b. Select 'Mod' to modify your current Modem Settings

Γ	Interface Name	APN	Service Code	Username	Simcard	Operation		
	0	od1.korem2				Mod Del En Dis]	
	Add Refresh							

c. Enter the APN Provided by your mobile provider

secongs		
Interface Name	0	* Max length is 12
APN	od1.korem2m.com	Max length is 64
Service Code		Max length is 64
Username		Max length is 64
Password		Max length is 64
PIN		Max length is 64
Network Type	auto 🔻	
Connection mode	dhcp 🔻	
Advanced Settings	Display	

d. Press 'Save' once complete.



4. Open the 'Status>Modem' Window to check your 4G LTE Connection status

a. From the right-most menu, open the 'Status> Modem' window

modem	
Modem Select	0
Up Time	384 seconds
Modem Status	connected
Network Type	WCDMA
Signal	•III(25)
IP Address	10.129.214.146
DNS	8.8.8.8
SIM Status	ready
SIM ICCID	8961025415015474709
SIM IMSI	505025405159814
LAC	0
CELL ID	0
	Defrech
	Kerresii

b. Check your 4G Signal Strength (0-31), and your connection status.

eSAM

5. Configure Static IP' s (optional)

intercel

Static IP's are fixed to a specific device and won't change over time.

a. Open the '*Network* > *DHCP*' window from the rightmost menu

DHCP Server	Enable Disable	Enable Disable				
Settings						
Domain Name	Test	Max length is 32				
IP Pool	custom 🔻					
Start	192.168.8.2	* eg. 192.168.8.1				
End	192.168.8.200	* eg. 192.168.8.254				
Gateway Type	custom T					
Gateway	192.168.8.1	* eg. 192.168.8.1				
DNS Type	custom 🔻					
DNS1	8.8.8.8	* eg. 192.168.8.1				
DNS2	8.8.8.4	eg. 192.168.8.254				
Lease Time	36000	* 120-86400 s				
IP		* eg. 192.168.8.1				
MAC		* eg. 00:1A:4D:34:B1:8E				
	Add					

- b. Enter the desired Static IP Address and the MAC Address of the device you want to assign this IP to.
- c. Press 'Add' to add this MAC-IP pair.
- d. Add as many static IP's as desired
- e. Press 'Save' to save your settings

6. Change your username and password (recommended)

- a. Open the 'System>Account' window from the right-most menu
- b. Enter your desired Username and Password.
- c. Enter the port you want to use to access the web interface (80 is suggested)
- d. Press 'Save' to save your new settings.

7. Backup your Configuration (optional)

- a. Open the 'System>Files' window from the right-most menu
- b. Press the 'Export' button to download your eSAM Configuration

Backup setting	Choose file	No file chosen	Import	Export	Key	

